

## **BIG BIKE PARTS**® INSTALLATION INSTRUCTIONS

Copyright© 2005 by Big Bike Parts, Inc.™  
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.™

Brake & Clutch Lever Fits Honda  
Part No. 18-111 GL1800 Goldwing  
18-112

WHEN INSTALLING BRAKE & CLUTCH LEVERS THERE ARE IMPORTANT FEATURES TO BE CHECKED BEFORE USE.

1. LEVERS SHOULD BE ABLE TO BE ENGAGED AND DIS-ENGAGED FREELY.
2. MOST LEVERS WHEN ENGAGED & DIS-ENGAGED ACTIVATE SWITCHES, VERIFY THIS BY LISTENING FOR THE SWITCH "CLICK" NOISE WHEN ENGAGING & DIS-ENGAGED. MAKE SURE THE SWITCHES ARE WORKING BEFORE USE.
3. THESE LEVERS ARE ADJUSTABLE TO ADJUST THE AMOUNT OF THROW OR THE RESTING POSITION OF THE LEVER, PUSH THE LEVER FORWARD AND TURN THE DIAL. POSITION 1 IS FURTHER FROM THE GRIP THEN POSITION 5.

## **BIG BIKE PARTS**® INSTALLATION INSTRUCTIONS

Copyright© 2005 by Big Bike Parts, Inc.™  
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.™

Brake & Clutch Lever Fits Honda  
Part No. 18-111 GL1800 Goldwing  
18-112

WHEN INSTALLING BRAKE & CLUTCH LEVERS THERE ARE IMPORTANT FEATURES TO BE CHECKED BEFORE USE.

1. LEVERS SHOULD BE ABLE TO BE ENGAGED AND DIS-ENGAGED FREELY.
2. MOST LEVERS WHEN ENGAGED & DIS-ENGAGED ACTIVATE SWITCHES, VERIFY THIS BY LISTENING FOR THE SWITCH "CLICK" NOISE WHEN ENGAGING & DIS-ENGAGED. MAKE SURE THE SWITCHES ARE WORKING BEFORE USE.
3. THESE LEVERS ARE ADJUSTABLE TO ADJUST THE AMOUNT OF THROW OR THE RESTING POSITION OF THE LEVER, PUSH THE LEVER FORWARD AND TURN THE DIAL. POSITION 1 IS FURTHER FROM THE GRIP THEN POSITION 5.

## **BIG BIKE PARTS**® INSTALLATION INSTRUCTIONS

Copyright© 2005 by Big Bike Parts, Inc.™  
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.™

Brake & Clutch Lever Fits Honda  
Part No. 18-111 GL1800 Goldwing  
18-112

WHEN INSTALLING BRAKE & CLUTCH LEVERS THERE ARE IMPORTANT FEATURES TO BE CHECKED BEFORE USE.

1. LEVERS SHOULD BE ABLE TO BE ENGAGED AND DIS-ENGAGED FREELY.
2. MOST LEVERS WHEN ENGAGED & DIS-ENGAGED ACTIVATE SWITCHES, VERIFY THIS BY LISTENING FOR THE SWITCH "CLICK" NOISE WHEN ENGAGING & DIS-ENGAGED. MAKE SURE THE SWITCHES ARE WORKING BEFORE USE.
3. THESE LEVERS ARE ADJUSTABLE TO ADJUST THE AMOUNT OF THROW OR THE RESTING POSITION OF THE LEVER, PUSH THE LEVER FORWARD AND TURN THE DIAL. POSITION 1 IS FURTHER FROM THE GRIP THEN POSITION 5.

## **BIG BIKE PARTS**® INSTALLATION INSTRUCTIONS

Copyright© 2005 by Big Bike Parts, Inc.™  
No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.™

Brake & Clutch Lever Fits Honda  
Part No. 18-111 GL1800 Goldwing  
18-112

WHEN INSTALLING BRAKE & CLUTCH LEVERS THERE ARE IMPORTANT FEATURES TO BE CHECKED BEFORE USE.

1. LEVERS SHOULD BE ABLE TO BE ENGAGED AND DIS-ENGAGED FREELY.
2. MOST LEVERS WHEN ENGAGED & DIS-ENGAGED ACTIVATE SWITCHES, VERIFY THIS BY LISTENING FOR THE SWITCH "CLICK" NOISE WHEN ENGAGING & DIS-ENGAGED. MAKE SURE THE SWITCHES ARE WORKING BEFORE USE.
3. THESE LEVERS ARE ADJUSTABLE TO ADJUST THE AMOUNT OF THROW OR THE RESTING POSITION OF THE LEVER, PUSH THE LEVER FORWARD AND TURN THE DIAL. POSITION 1 IS FURTHER FROM THE GRIP THEN POSITION 5.