

BIG BIKE PARTS® INSTALLATION INSTRUCTIONS

TRAILER WIRING HARNESS FOR HONDA PART NO. 2-448 GL1500/6 MODEL


Copyright© 1995 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.®

Revised 7/25/2017

ITEMS REQUIRED: #2 PHILLIPS SCREWDRIVER

INSTALLATION:

1. UNFASTEN AND REMOVE THE TRUNK LOWER COVER (FIG #1) BY REMOVING THE FOUR PHILLIPS HEAD SCREWS.
2. ROUTE OR FISH THE TRAILER WIRE HARNESS AROUND THE BACK OF THE LICENSE PLATE LIGHT, BEHIND THE REAR TIRE TO THE BOTTOM OF THE LEFT SADDLEBAG FRAME.
3. ROUTE THE LONG SIDE OF THE WIRE HARNESS TO THE RIGHT SIDE OEM 6 PIN VERTICAL CONNECTOR THAT IS JUST IN FRONT OF THE TAIL LIGHT ASSEMBLY. UNPLUG THE STOCK 6 PIN CONNECTOR (FIG #2) AND PLUG THE HARNESS IN BETWEEN THE 6 PIN PLUGS. REPEAT FOR THE LEFT SIDE USING THE SHORT SIDE OF THE HARNESS.
4. PULL THE EXCESS SLACK OUT FROM THE BOTTOM OF THE HARNESS AND TUCK/ROUTE THE HARNESS UNDER THE SADDLEBAG FRAME TUBES.
5. TUCK THE WIRES UP WITH THE OTHER WIRING UNDER THE TRUNK ALLOWING THE TRUNK LOWER COVER TO BE REINSTALLED.
6. NOW CONNECT THE WIRE LEADS TO YOUR CHOSEN STYLE OF TRAILER WIRE CONNECTOR (SOLD SEPARATELY), BASED ON THE FOLLOWING TYPICAL GL1500 WIRING CODE: GREEN - GROUND; YELLOW - BRAKE; BROWN - TAIL/RUNNING; ORANGE - LEFT TURN SIGNAL; BLUE - RIGHT TURN SIGNAL; WHITE - ACCESSORY.

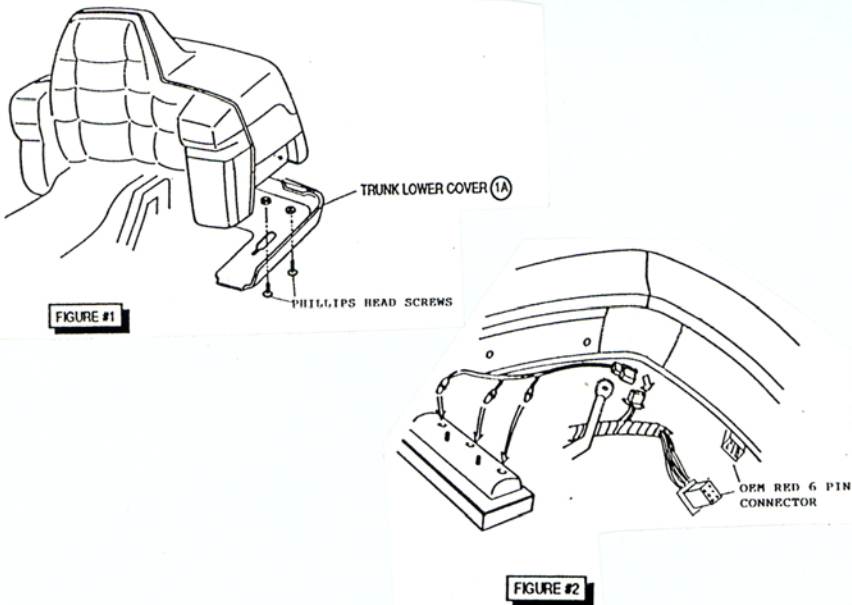

BIG BIKE PARTS® INSTALLATION INSTRUCTIONS

TRAILER WIRING HARNESS FOR HONDA PART NO. 2-448 GL1500/6 MODEL

Copyright© 1995 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.®

Revised 7/25/2017

ITEMS REQUIRED: #2 PHILLIPS SCREWDRIVER

INSTALLATION:

1. UNFASTEN AND REMOVE THE TRUNK LOWER COVER (FIG #1) BY REMOVING THE FOUR PHILLIPS HEAD SCREWS.
2. ROUTE OR FISH THE TRAILER WIRE HARNESS AROUND THE BACK OF THE LICENSE PLATE LIGHT, BEHIND THE REAR TIRE TO THE BOTTOM OF THE LEFT SADDLEBAG FRAME.
3. ROUTE THE LONG SIDE OF THE WIRE HARNESS TO THE RIGHT SIDE OEM 6 PIN VERTICAL CONNECTOR THAT IS JUST IN FRONT OF THE TAIL LIGHT ASSEMBLY. UNPLUG THE STOCK 6 PIN CONNECTOR (FIG #2) AND PLUG THE HARNESS IN BETWEEN THE 6 PIN PLUGS. REPEAT FOR THE LEFT SIDE USING THE SHORT SIDE OF THE HARNESS.
4. PULL THE EXCESS SLACK OUT FROM THE BOTTOM OF THE HARNESS AND TUCK/ROUTE THE HARNESS UNDER THE SADDLEBAG FRAME TUBES.
5. TUCK THE WIRES UP WITH THE OTHER WIRING UNDER THE TRUNK ALLOWING THE TRUNK LOWER COVER TO BE REINSTALLED.
6. NOW CONNECT THE WIRE LEADS TO YOUR CHOSEN STYLE OF TRAILER WIRE CONNECTOR (SOLD SEPARATELY), BASED ON THE FOLLOWING TYPICAL GL1500 WIRING CODE: GREEN - GROUND; YELLOW - BRAKE; BROWN - TAIL/RUNNING; ORANGE - LEFT TURN SIGNAL; BLUE - RIGHT TURN SIGNAL; WHITE - ACCESSORY.

