


Revised 7/25/2017

ITEMS REQUIRED: DRILL 5/32" DRILL BIT SCREWDRIVER MASKING TAPE PUNCH

INSTALLATION:

1. REMOVE THE LICENSE PLATE.
2. CUT OUT THE TEMPLATE AND LINE UP THE ARROWS ON THE TEMPLATE WITH THE ARROW LOCATIONS SHOW ON FIGURE 1.
3. TAPE THE LOWER THREE ARROW LOCATIONS, THE TAPE DOWN THE SIDES OF THE TEMPLATE TO MATCH THE CONTOUR.
4. MARK THE TWO HOLE LOCATIONS WITH A PUNCH AND DRILL THE HOLES WITH A 5/32" DIAMETER BIT.
5. TO INSTALL THE TRIM: THE UPPER ENDS SLIDE IN BEHIND THE LOWER TRUNK ACCENT AND THEN LOWER INTO PLACE. MAKE SURE THE PINS LINE UP WITH THE HOLES.
6. REMOVE THE PAPER ON DOUBLE BACK TAPE AND INSTALL INTO PLACE.
7. FROM THE BACK SIDE, PUSH ONE PALNUT (SUPPLIED) ONTO EACH PIN.

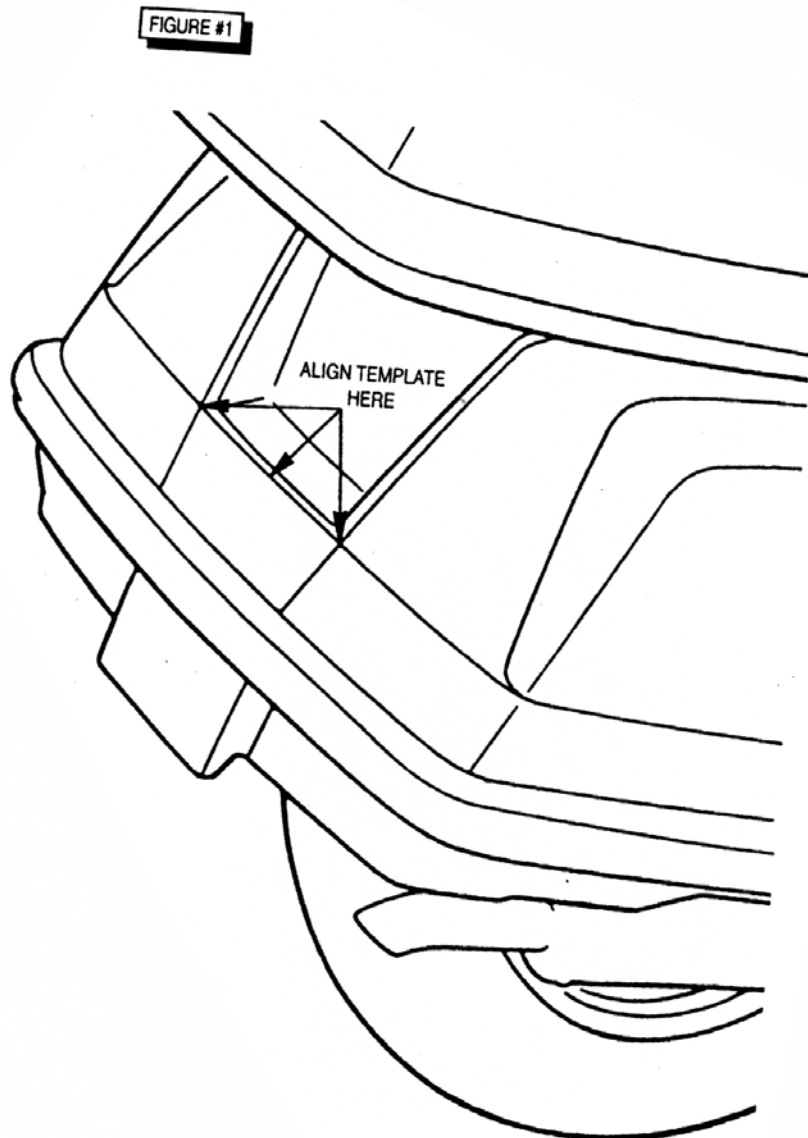

OVER

HOLE TEMPLATE

