





Low Profile Hardware Installation Instructions

Step 1: Install the lower section of the shield on your motorcycle using your factory windshield hardware.


Step 2: (BaggerShield hardware) Press the 3 white bushings into the 3 rubber wellnuts

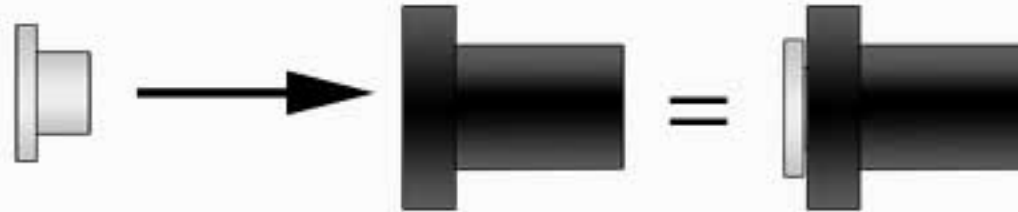

Step 3: Put the 3 flathead bolts with black washers on them through the holes in the front side of the bottom shield and attach the wellnuts to the end of the bolts sticking out of the rider's side. Do not tighten yet.

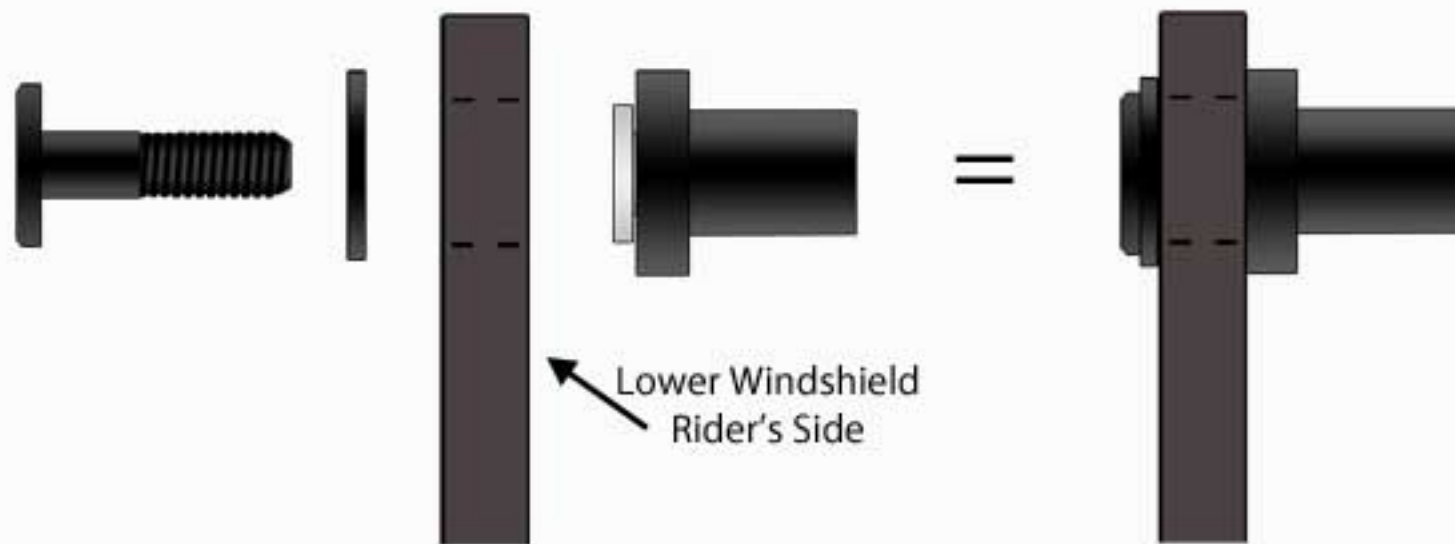

Step 4: Insert the wellnut side of the assemblies one at a time into the holes on the upper shield. Start with one end, then the middle, then the other end. Some flexing of the upper shield will be required in order to accomplish this. After the upper shield is in place, tighten bolts with hex wrench provided until the wellnuts expand and are firmly holding the 2 shields together.

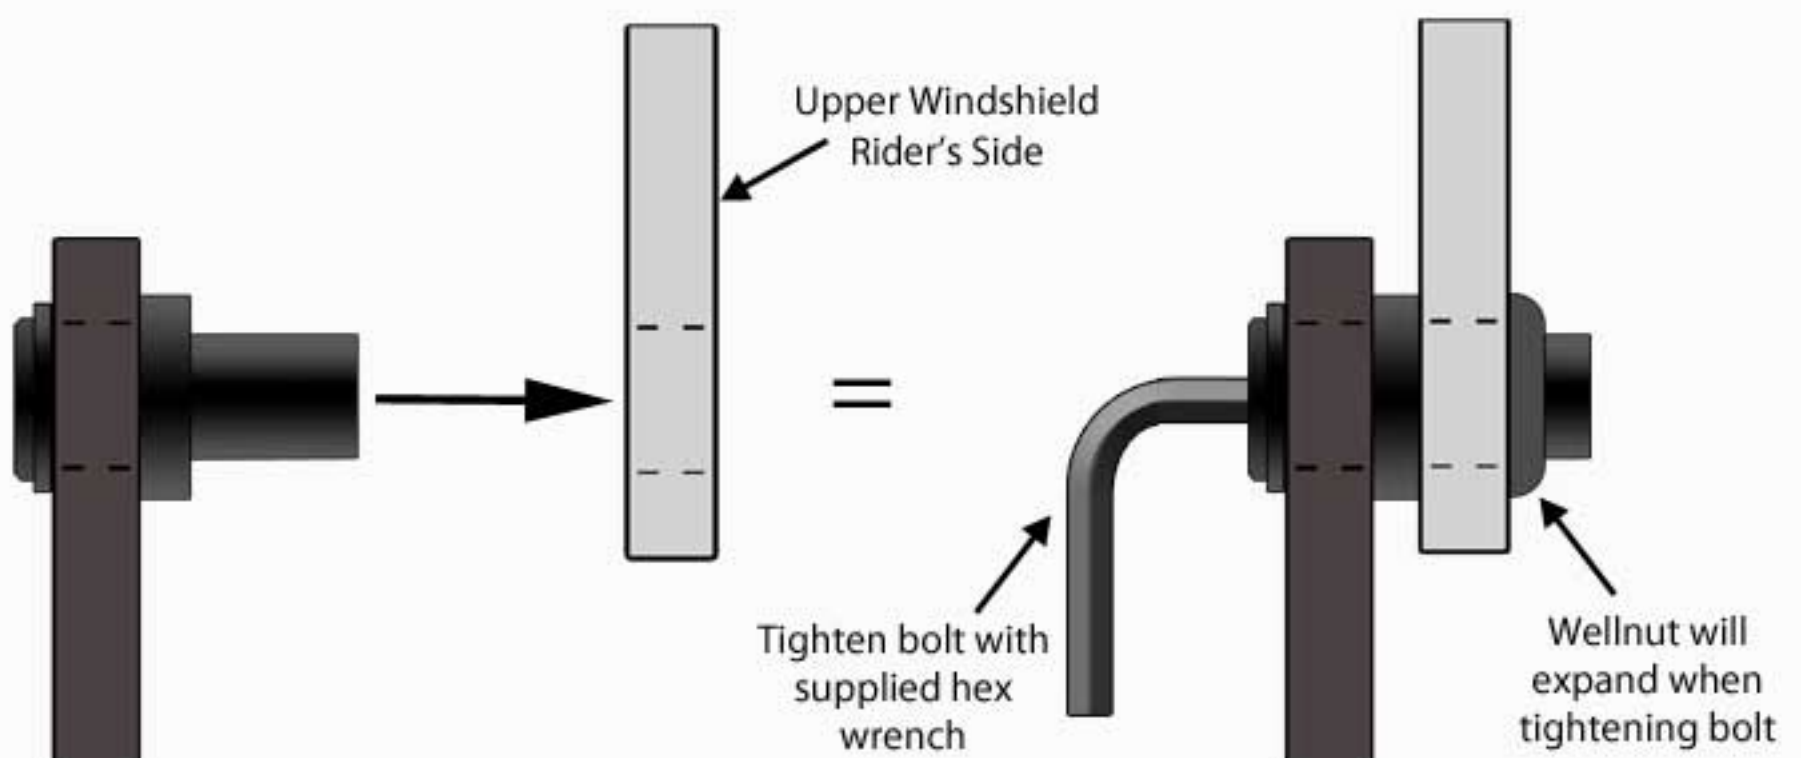




Quick Change Hardware Installation Instructions

Step 1: Install the lower section of the shield on your motorcycle using your factory windshield hardware.


Step 2: (BaggerShield hardware) Press the 3 white bushings into the 3 rubber wellnuts

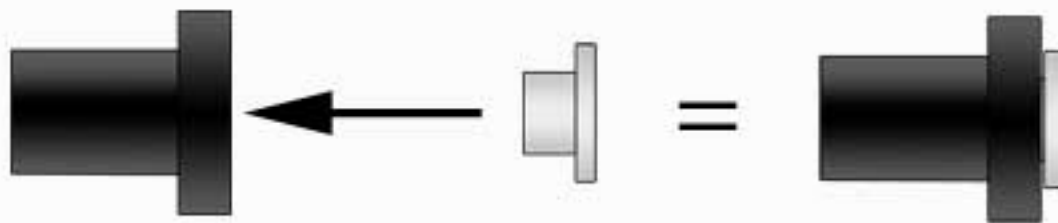

Step 3: Screw the 3 button head bolts into the 3 wellnuts and tighten with hex wrench provided



Step 4: Insert threaded end of wellnut assemblies into front side of the upper windshield. Then on the rider's side attach black washers and wingnuts. Leave wingnuts loose.

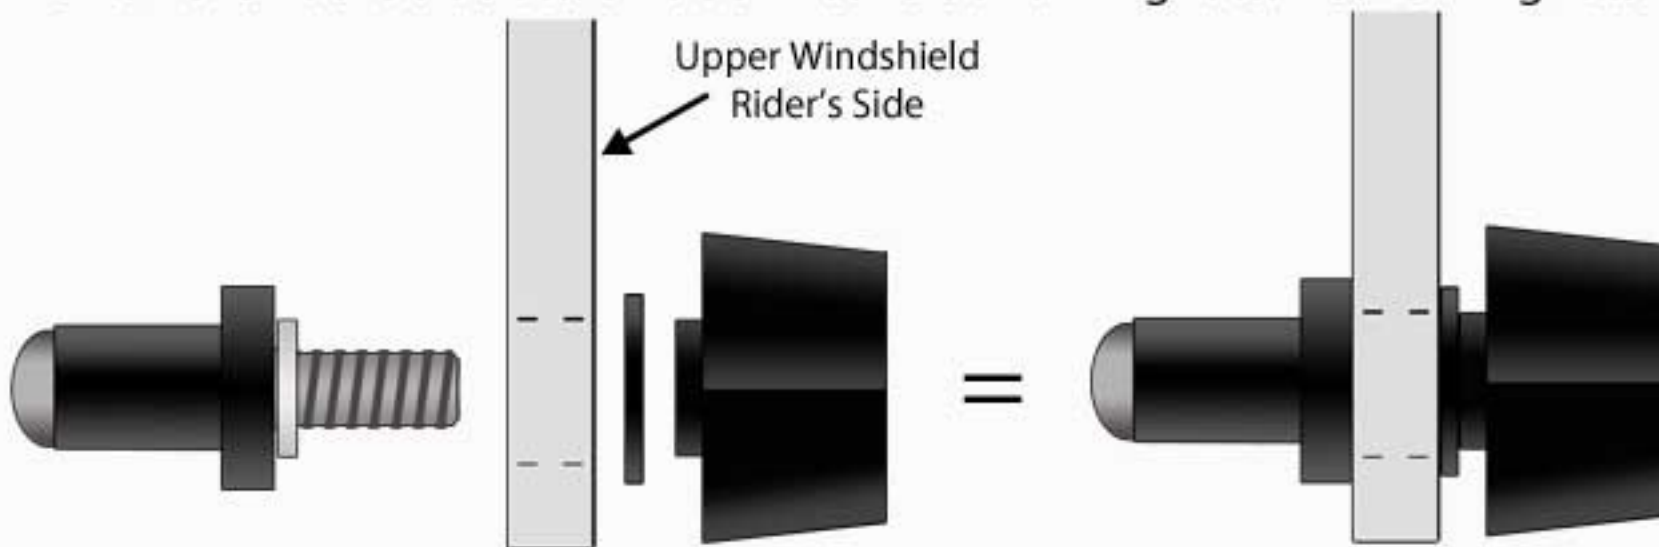

Step 5: Insert the bolt head side of the assemblies one at a time into the holes on the lower shield. Start with one end, then the middle, then the other end. Some flexing of the upper shield will be required in order to accomplish this. After the upper shield is in place, tighten wingnuts until the wellnuts expand and are firmly holding the 2 shields together.

