

Copyright© 2001 by Big Bike Parts, Inc.  
No part of this instruction sheet may be  
reproduced without the written permission  
of Big Bike Parts, Inc.©

## FRONT FENDER RAIL

PART NO. 52-602

FITS: GL1800

Revised 9/22/08

ITEMS REQUIRED: 5MM ALLEN WRENCH

### INSTALLATION:

1. USING 5MM ALLEN WRENCH REMOVE THE FOUR SCREWS (1A) HOLDING THE FRONT FENDER ON. (THESE SCREWS WILL NOT BE REUSED)
2. PLACE FENDER RAIL (2A) ON FENDER AS SHOWN IN FIG. 1.
3. PLACE THE NEW 50MM LONG SCREWS (2B) WHERE THE OEM SCREWS WERE. TIGHTEN USING 5MM ALLEN WRENCH.

**CAUTION: DO NOT OVER TIGHTEN**

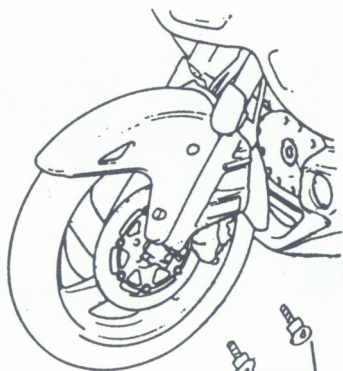


FIG 1

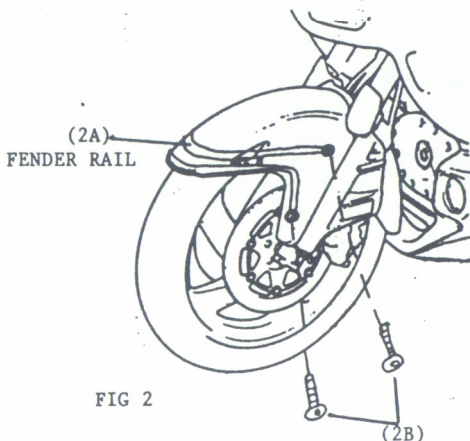


FIG 2

NEW 50mm LONG SCREWS