

BIG BIKE PARTS® INSTALLATION INSTRUCTIONS

Copyright© 2012 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.©


PART NO. TRUNK CUBBYHOLDS
52-690A HONDA GL1800 GOLDWING
2001-2012

REVISED: 5/16/2012


TOOLS REQUIRED: PHILLIPS SCREWDRIVER

1. REMOVE THE TWO SCREWS ON GL1800 2001-2010 AND THREE SCREWS ON GL1800 2012 (1A) WHICH HOLD THE TRUNK MOLDING IN PLACE.
2. PLACE THE CUBBYHOLD UP TO THE SIDE OF THE TRUNK AND INSTALL USING THE OEM (1A) SCREWS YOU REMOVED IN STEP 1.
3. REPEAT FOR OTHER SIDE.

GL1800 2001-2010

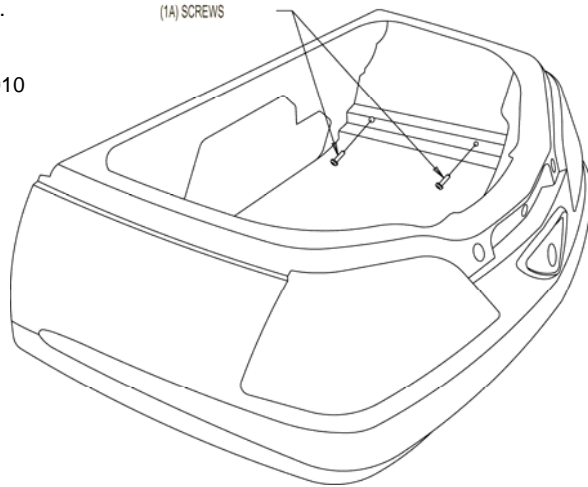

(1A) SCREWS

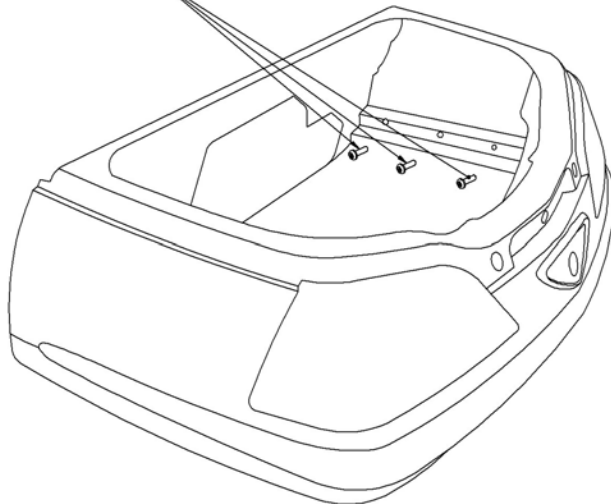

GL1800 2012

