


9/6/2012

TOOLS NEEDED:	10MM SOCKET WRENCH	3MM ALLEN WRENCH		
HARDWARE INCLUDED:	(2) M5-0.8 X 8MM BUTTON HEAD CAP SCREW			

**NOTE: THREAD LOCK COMPOUND SHOULD BE USED ON ALL HARDWARE****PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.****INSTALLATION:**

1. PLACE MOTORCYCLE ON CENTER STAND.
2. ON THE LEFT SIDE OF THE BIKE (NEAR THE SHIFT LEVER) LOCATE THE TWO M10 CAP NUTS IN THE ROUND HOLES ON THE LOWER COWL.
3. REMOVE THE TWO 10MM NUTS AND PULL THE COWL OUT, LEAVING ENOUGH SPACE FOR THE BELLY PAN.
4. TAKE THE BACK PART OF THE BELLY PAN (KEEPING THE INSERT NUTS FACING FORWARD AND THE FLANGES FACING UP) AND SLIDE THE LEFT MOUNTING SLOTS ONTO THE STUDS THAT HELD THE NUTS IN STEP 3.
5. HOLD THE BELLY PAN TIGHT TO THE STUDS AND REINSTALL THE TWO 10MM CAP NUTS. TIGHTEN.
6. ON THE RIGHT SIDE (NEAR THE BRAKE PEDAL) LOCATE AND REMOVE THE TWO 10MM CAP NUTS FROM THE LOWER COWL.
7. PULL THE LOWER COWL OUT, LEAVING ENOUGH SPACE FOR THE BELLY PAN.
8. SLIDE THE RIGHT SIDE OF THE BACK BELLY PAN ONTO THE STUDS. CHECK TO MAKE SURE THE TWO BLACK OVERFLOW HOSES ARE COMING THROUGH THE LARGE SLOT IN THE REAR OF THE BELLY PAN.
9. REINSTALL AND TIGHTEN THE TWO 10MM CAP NUTS WHILE HOLDING THE BELLY PAN TIGHT TO THE STUDS.
10. TAKE THE FRONT BELLY PAN (KEEPING THE FLANGES FACING UP AND THE SMALL FLANGE FACING FORWARD) AND SLIDE THE SMALL FLANGE OVER THE BOTTOM EDGE OF THE FRONT COWL.
11. LIFT THE REAR OF THE FRONT BELLY PAN TO ALIGN THE TWO SCREW HOLES WITH THE BACK BELLY PAN. MAKE SURE THE FRONT STAYS IN PLACE.
12. INSTALL THE TWO M5-0.8 X 8MM BUTTON HEAD CAP SCREWS USING A 3MM ALLEN WRENCH. TIGHTEN.

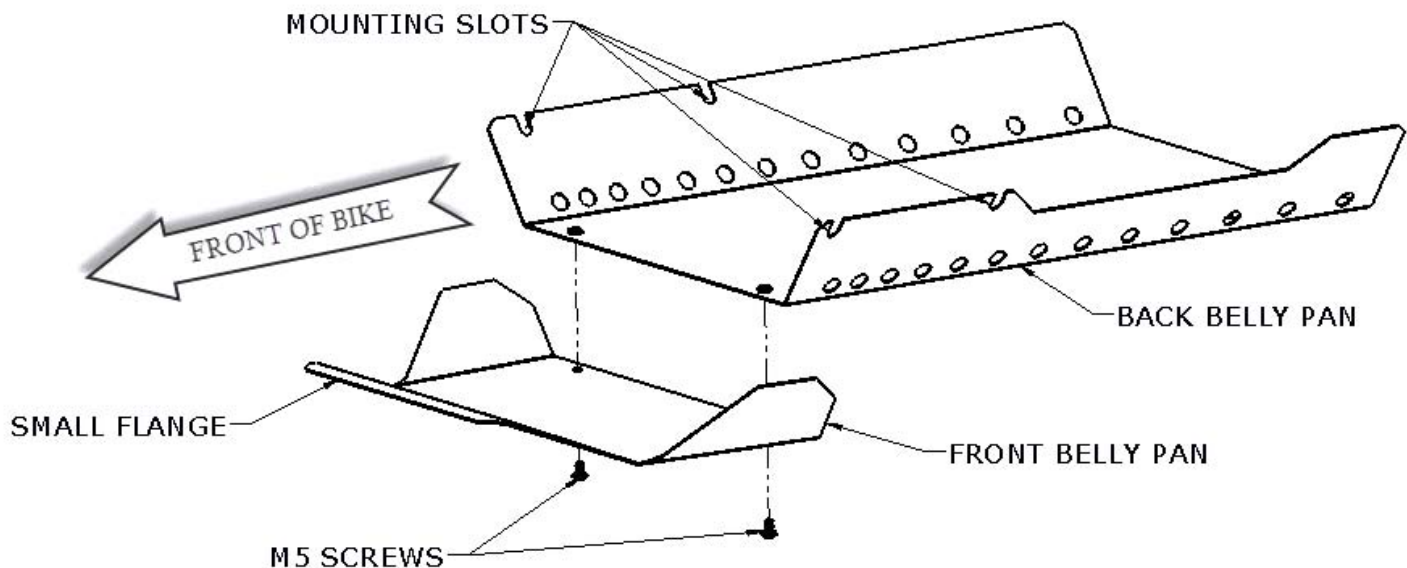

Scan code  
with your  
smartphone  
to view install  
video

