

4/16/2012

ITEMS REQUIRED: 5MM ALLEN WRENCH

INSTALLATION:

**NOTE: PUT BIKE SECURELY ON ITS CENTER STAND.**

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

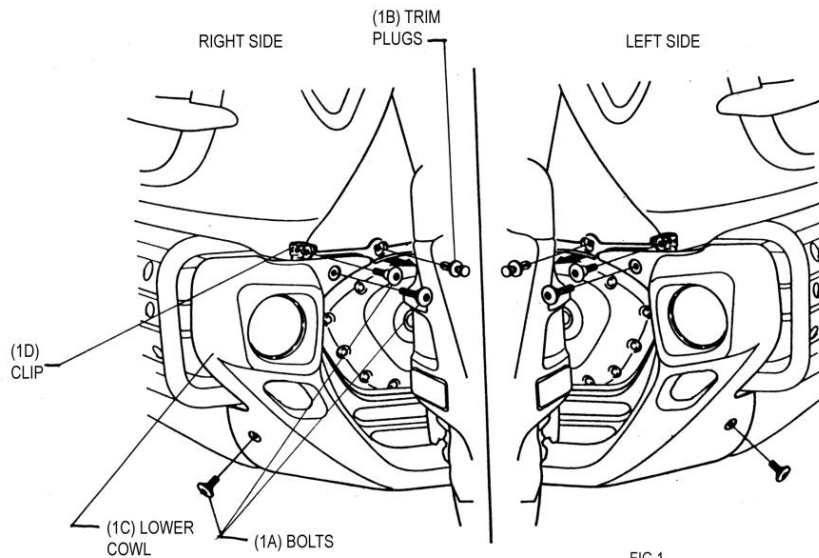


FIG 1

4/16/2012

ITEMS REQUIRED: 5MM ALLEN WRENCH

INSTALLATION:

**NOTE: PUT BIKE SECURELY ON ITS CENTER STAND.**

1. USING 5MM ALLEN WRENCH REMOVE THE 6 ALLEN BOLTS (1A) HOLDING LOWER COWL (1C) TO BIKE.
2. PULL OUT THE TWO TRIM PLUGS (1B) ON LOWER COWL (1C).
3. REMOVE THE LOWER COWL (1C) FROM BIKE.
4. REMOVE THE TWO CLIPS (1D) ON LOWER COWL (1C) AND PLACE ON NEW COWL.
5. INSTALL NEW COWL IN THE REVERSE OF REMOVAL.

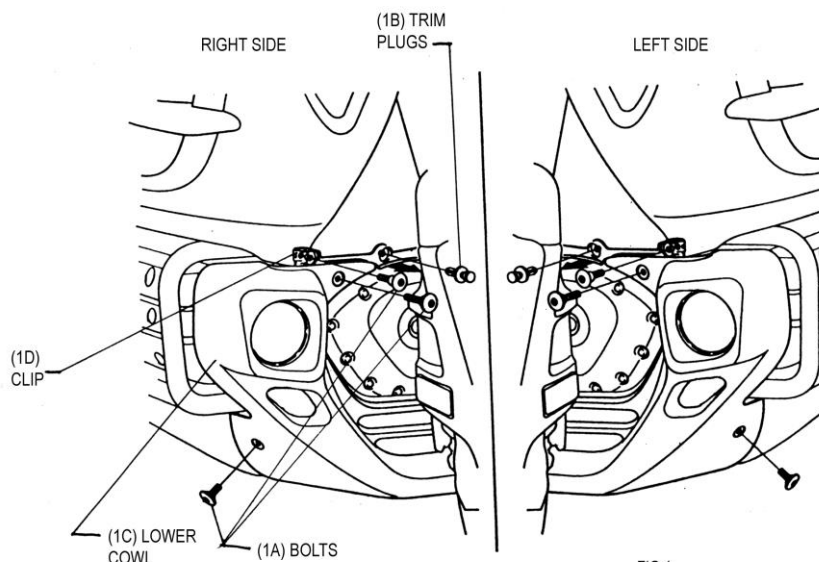


FIG 1