

Copyright © 2015 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-844**GADGET BAR HOLDER****GL1500 AND GL1800, HONDA AND YAMAHA CRUISERS**

3/23/2015

TOOLS NEEDED: 5MM ALLEN WRENCH

4MM ALLEN WRENCH

10MM WRENCH

THREAD LOCK

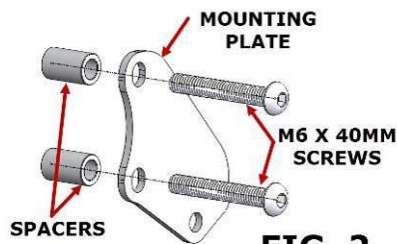
2MM ALLEN WRENCH

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

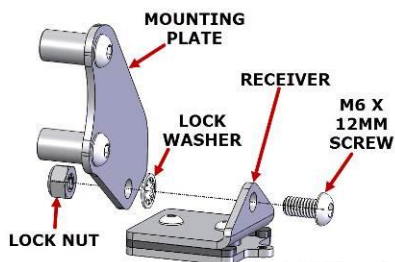
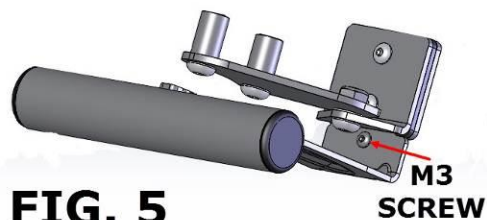
NOTE: THIS CAN BE MOUNTED ON EITHER THE LEFT OR THE RIGHT SIDE OF MOTORCYCLE. THE INSTRUCTIONS ARE FOR A LEFT SIDE INSTALLATION. USE THREAD LOCK ON ALL FASTENERS.

INSTALLATION:

1. USING A 5MM ALLEN WRENCH REMOVE THE TWO ALLEN BOLTS THAT HOLD THE CLUTCH LEVER TO THE HANDLEBARS. SEE FIG. 1. THEY WILL NOT BE REUSED.
2. APPLY THREAD LOCK NEAR THE END OF THE TWO M6 X 40MM SCREWS SUPPLIED WITH THE MOUNT.
3. ASSEMBLE THE M6 X 40MM SCREWS AND SPACERS AS SHOWN IN FIG. 2.
4. USING A 4MM ALLEN WRENCH INSTALL THE MOUNT TO THE BIKE. SEE FIG. 3.
5. ASSEMBLE THE RECEIVER TO THE MOUNTING PLATE USING THE M6 X 12MM SCREW, LOCK WASHER, AND LOCK NUT AS SHOWN IN FIG. 4.
6. ADJUST THE ANGLE OF THE RECEIVER MOUNT AND TIGHTEN USING A 4MM ALLEN WRENCH AND A 10MM WRENCH.
7. SLIDE THE GADGET BAR HOLDER INTO THE MOUNT AND INSTALL THE M3 SCREW AS SHOWN IN FIG. 5.

**FIG. 1****FIG. 2****FIG. 3**

LEFT SIDE

**FIG. 4****FIG. 5****M3 SCREW**

Scan code with your smartphone to view video

